
## ASSEMBLY AND INSTALLATION INSTRUCTIONS

CH55405 / CH55505 / CH55605 / CH55705


WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.

2. READ AND SAVE THESE INSTRUCTIONS.

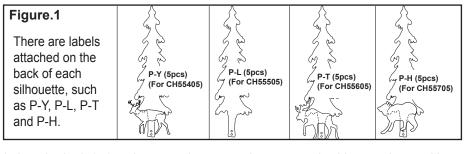

- 1. Attach nipple(-a) to the mounting strap, then secure it with a washer and hex nut.
- 2. Attach the mounting strap to the outlet box by using two mounting screws.
- 3. Secure the top loop to nipple(-a).
- 4. Carefully attach the upper fixture onto the holder by securing the rod to nipple(-b).
- 5. Adjust the arms of the fixture according to the drawing of the package. **Important:** 
  - a. The arms should be positioned with equal distances between them.
  - b. The arms should be fixed securely.
- 6. Attach the silhouettes to the holder by aligning holes, and then secure them with set screws. (See Figure 1)
  - a. Use the tree side of the silhouettes which marked "P-T" or "P-Y" or "P-H" touch the holder.
  - b. You can install the silhouettes which marked P-Y (for CH55405) or marked P-L (for CH55505) or marked P-H (for CH55705) to the location of silhouettes which marked P-T (for CH55605) shown in right graph to replace them.
- 7. Choose the length of the chain you need, then weave the fixture wire and the fixture grounding wire through the chain, collar and canopy.
- 8. Connect one end of the chain with the loop by using a loop lock.
- 9. Connect the other end of the chain with the top loop by using another loop lock.
- 10. Thread the fixture wire and fixture grounding wire through the top loop, nipple(-a) and mounting strap.
- 11. Pull out the outlet wires and house grounding wire from the outlet box. Make wire connections using the wire nuts:
  - ---The smooth wire (marked) from the fixture to the black wire from the power source.
  - ---The ridged wire (unmarked) from the fixture to the white wire from the power source.
  - ---Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with a wire nut.
  - Carefully put the wires back into the outlet box.
- 12. Attach the canopy to the mounting strap by inserting the top loop, then secure it with the collar.
- 13. Screw nipple(-c) into coupling, secure it with a hex nut. Then attach the cover upward to the holder by inserting nipple(-c), secure it with finial.
- 14. Attach the glass shades to the glass holders, then secure them with socket rings.
- 15. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
- 16. Turn on the power at the main fuse or circuit breaker box.

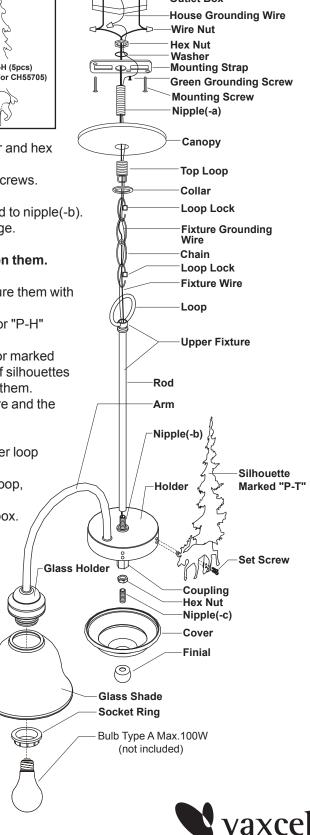

110319